

STORM

LONDON

CHRONOGRAPH MODELS

USING THE STOPWATCH FUNCTION

- The stopwatch can measure up to 12 hours in hour, minute and second increments.
- Before using the stopwatch, ensure the stopwatch hands return to the 0 position when reset (See STOPWATCH HAND ADJUSTMENT).
- Press button A once to initiate stopwatch timing.
- To stop the stopwatch timing press button A a second time.
- The stopwatch can be reset to 0 by pressing button B. The stopwatch does not need to be reset before timing again, button A can be used as many times as required to measure split time before resetting using button B.

Note

There are 3 standard types of chronograph models. See overleaf diagrams for features unique to each. Some models may vary.

The Chronograph second hand should not be operating unless the stop watch function is being used. Leaving the stop watch function on continuously without stopping it will damage the mechanism.

DATE ADJUSTMENT

- To adjust the date, pull the crown out to position 1 and turn anticlockwise to advance the date.


STOPWATCH HAND ADJUSTMENT

- If the stopwatch hands do not return to the 0 position when the stopwatch is reset by pressing B, follow the procedure below to reset them to the 0 position.
- Pull out the crown to the second position.
- To reset the stopwatch second hand to the 12 position on the main dial press button A. With each press of A, the second hand advances 1 second, or moves continuously if the button is pressed and held for more than 2 seconds.
- Push back the crown to the normal position.

02-06-09

DISPLAY AND CROWN/BUTTON OPERATION

CHRONOGRAPH TYPE 1 (SECOND/MINUTE/HOUR) DATE

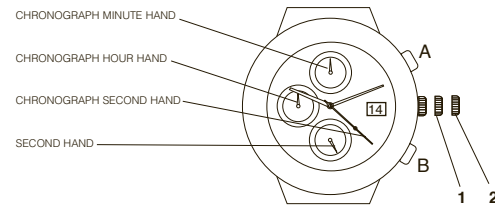


CROWN OPERATION

- Position 1 turn anticlockwise for date adjustment
 Position 2 turn anticlockwise for time adjustment
 push A to advance chronograph second hand to 0

BUTTON OPERATION

- A start/stop stopwatch
 B reset stopwatch to 0

CHRONOGRAPH TYPE 2 (SECOND/MINUTE/HOUR) DATE/TORCH

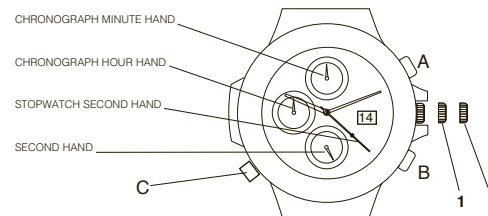


CROWN OPERATION

- Position 1 turn anticlockwise for date adjustment
 Position 2 turn anticlockwise for time adjustment
 push A to advance chronograph second hand to 0

BUTTON OPERATION

- A start/stop of the stopwatch
 B reset of the stopwatch to 0
 C torch

CHRONOGRAPH TYPE 3 (MINUTE/24HR) DATE

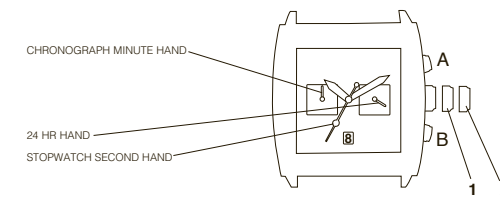

CROWN OPERATION

- Position 1 turn anticlockwise for date adjustment
 Position 2 turn anticlockwise for time adjustment
 push A to advance chronograph second hand to 0

BUTTON OPERATION

- A start/stop stopwatch
 B reset stopwatch to 0