

BATTERY REPLACEMENT

NB. This watch features an easy open case back for DIY battery changing. Use a suitable size coin and place it in the slot on the case back. Turn in the direction indicated to either Open or Close.

Please make sure the case back is closed securely for water resistance. Once the back is opened, water resistance can not be guaranteed unless it is sealed and tested by a professional or at our service centre.

 
Battery type: 2 x CR2016 (3V)

Note: Battery life will depend on usage.




04/11

STORM

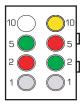

CODE

FRONT

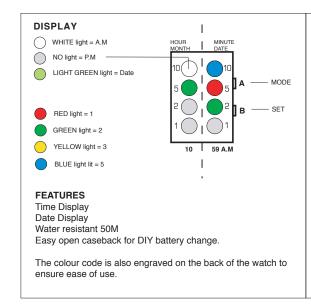

READING THE DISPLAY

Read the left hand column first and then the right i.e Hours/Month then Minutes/Date.

Multiply the value of the coloured lights by the corresponding number on the case i.e Green light = 2 (X by the light position number on the case, either 10/5/2/1. Example 2 x 5 = 10

VIEWING THE TIME AND DATE

BLUE light = 5

Press A once to view the time.

Read left column for the Hour and right column for the Minutes.

(Note: White colour light will show at the top left corner for A.M. No colour light means P.M).

Press A twice to view the date.

Read left column for Month and right column for Date. (Note: Light green colour light will show at top left corner for Date).

SETTING THE TIME & DATE

Press A once to view the Time.

Press B to enter the setting mode.

Press A to advance the hour.

Press B to set Hour and enter Minute mode.

Press A to advance the minute. *

Press B to set Minute and enter Month mode.

Press A to advance the Month.*

Press B to set Month and enter Date mode.

Press A to advance the Date.*

Press B to set Date and exit the setting mode.

*Note: Press and hold A for quick advance on any setting sequence.

Scrolling through the sequence a few times will improve your understanding of the colours and sequence.