

Please make sure the case back is closed securely for water resistance. Once the back is opened, water resistance can not be guaranteed unless it is sealed and tested by a professional or at our service centre.

Do not operate the pushers whilst in water.

Battery type: 1 x CR2016 (3V)

Note: Battery life will depend on usage.




4-16

STORM

DIGITRON

DISPLAY DETAILS

Animation/Time/Date
W/R 50M
AM - White LED
DATE - Yellow LED

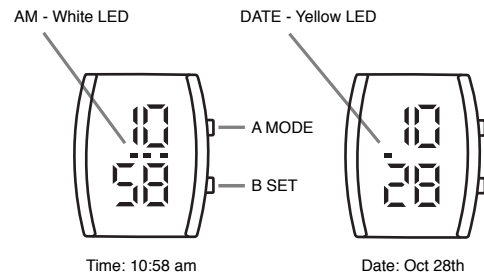

■ ■ ■ ■ = Animation setting

READING THE TIME/DATE

Press button A once to view the time.

Press button A while time is displayed to view the date.

SETTING THE TIME AND DATE

Press A button to view the time.

While time is displayed, press button B so that the HOUR flashes, you are now in setting mode:

While digits are flashing, press B to select the setting mode:

HOUR - MINUTE - YEAR - MONTH - DATE - ANIMATION

While the desired setting mode is flashing, press button A repeatedly to advance digits (press and hold for continuous advance).

Press button B to set and move to next sequence, repeat for all setting modes.

TURN ON/OFF START UP ANIMATION

While the 4 LED blocks are displayed (after the date setting) press A to select or deselect the blocks for start up animation.

When LED display switches off, all setting is automatically saved.