



FUNCTIONS AND FEATURES

- DUAL TIME
- DAY
- DATE
- MOON PHASE INDICATOR*
- WATER RESISTANT 50M/5ATM

FENTON

SETTING TIME, DAY, DATE and MOON PHASE

TIME and DAY

Pull the LEFT crown out to position 2L.

Turn the crown clockwise to set hands to desired DAY and then TIME.

Please note that the Day and Date will change at 12:00am Midnight and the moon phase will move in time with the hands.

DATE

Press the crown in to position 1L.
Turn the crown anticlockwise to set the date.
Press the crown in to position 0 to complete.

MOON PHASE INDICATOR

Press the crown in to position 1L.

Turn the crown clockwise to set the moon in the correct stage of it's cycle.

Press the crown in to position 0 to complete.

SETTING THE DUAL TIME

Pull the RIGHT crown out to position 1R. Turn the crown clockwise or anticlockwise to set the hand to point at the correct HOUR on the corresponding semi circle.

READING THE TIME

The longer side of the hand points to the Hours on the OUTER semi circle to show the hour between 9 AM/PM and 2 AM/PM
The Shorter side of the hand points to the Hours

The Shorter side of the hand points to the Hour on the INNER semi circle to show the hour between 3 AM/PM and 8 AM/PM

NB: The dual time dial shows the hour only. To view the minute, refer to the main time minute hand



^{*}NB: Design feature only, not highly accurate.