


DEMONSTRATION MODE

In normal time mode, press B button. The hour and minutes wheel will rotate for 15 to 20 seconds.

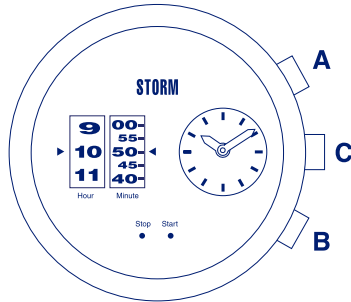

STORM

BATTERY

Battery Type: LR44 x2
Battery life will depend on the usage.



01/20

KOMBITRON

SETTING PROCEDURE - PLEASE COMPLETE FIRST

The watch must be set to 12:00 accurately before setting the time.

ROLLER TIME SETTING (LEFT)

1. Press and hold the B button for 2 seconds, the left roller (Hour) will start rotating and stop. Use the A button to adjust the roller display to "12".
2. Press B once, the right roller (Minutes) will start rotating and stop. Use the A button to adjust the roller display to "00".
3. Press B once, the two rollers will rotate and stop.
4. After the two rollers have stopped, use the A button to adjust the left roller (Hour) to the actual "Hour" time.
5. After completing the "Hour" setting, press the B button once, the right roller (Minutes) will start rotating and stop, use the A button to adjust the right roller (Minutes) to the actual set "Minute" time.

6. When finished, press B once, the two rollers will rotate and stop, roller time setting completed.

Note: Press and hold A button for quick advance.

ANALOGUE TIME SETTING (RIGHT)

Press C for 2 seconds, the minute hand will start to move clockwise. Continue to press C for 3 seconds then release, the hands will quick advance automatically.

When approaching the desired time, press C and then fine tune by pressing C repeatedly. Note: After the analogue time is set, wait for 10 seconds without pressing any button. The Hour roller will turn around once to confirm analogue time is set.

STOPWATCH FUNCTION OPERATION

1. In normal time mode, press A to enter the stopwatch mode, the red light at the bottom left will start flashing and the roller on the left will show "12:00".

2. Press A to start counting. The green light at the bottom right starts flashing and the right roller will roll forward to count seconds.

- After 59 seconds the roller will stop counting seconds and change to counting minutes only.
- The stopwatch function is based on minutes as the unit. The first 59 seconds do not have a stopwatch function.

3. Press A to stop counting.

- Within one minute it will reset to new stopwatch mode.
- Over one minute the right roller will show the minutes counted.

4. Press B once to reset to stopwatch mode, press B again to go back to normal time mode.

- The longest counting range is 60 minutes, then the timer will stop and return to normal time mode, the green light will stop flashing.

Note: The stopwatch function consumes more power and will affect battery life.