

# **STORM**

## X-OMATIK

Limited Edition 3,000 pieces worldwide, Automatic mechanism with dual spring, 20 jewels, iridescent glass

### **SETTING THE TIME**

Pull out the crown to set the time. On first use or when the watch is completely stopped, manually turn the crown clockwise approximately 30-40 times to wind up the mainspring to start the watch. Do not over wind as this will cause damage to the mechanism. When the watch is worn on the wrist, the mainspring will be wound automatically through normal wrist movement. However, we do recommend that the watch is wound regularly to maintain optimum power.

#### **ACCURACY OF MECHANISM**

The mechanism is dependent on the conditions of use, such as the length of time the watch is worn on the wrist, temperature, arm movement,

service intervals and whether the mainspring is wound up fully or not. Mechanical watches tend to lose/gain time at low or high temperatures.

Your watch will be adversely affected by strong magnetism keep it away from close contact with magnetic objects. If the watch is affected, the parts of the mechanism may be magnetised, and will cause it to lose or gain time. In this case, repairs such as removal of magnetism are required.

### SERVICING

This watch is a precision device with a lot of moving parts, lubricated with special oils. If the parts run short of oil or get worn out, the watch may lose time or stop operation. In such a case, have the watch overhauled. It is recommended that the watch is overhauled and serviced every 18-24 months to maintain operation and accuracy of the mechanism. Please send to STORM for service. Our contact details and further information can be found in the product information leaflet.

X-OMATIK INSTRUCTIONS