


STORM

CHILLA

KEY OPERATION

KEY A : START/PAUSE
KEY B : MODE
KEY C : ADJUST/RESET
KEY D : BACK LIGHT

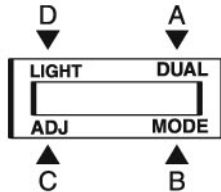

MODE SEQUENCE:
TIME > PERSONALISED MESSAGE > ALARM >
STOP WATCH > FORTUNE TELLING

FEATURES

LCD DISPLAY WITH BACKLIGHT, CHRONOGRAPH,
ALARM FUNCTION WITH 3 DIFFERENT TONES,
12/24 HOUR DISPLAY, YEAR, DST FUNCTION,
SCROLLING PERSONALIZED MESSAGE/MEMO OF
UP TO 10 CHARACTERS, WORLD TIME WITH 27
ZONES SELECTABLE, INTERACTIVE FORTUNE/
DECISION MAKER WITH 20 DIFFERENT MESSAGES.

TIME

- PRESS KEY C TO SHOW DATE AND DAY OF WEEK.
- PRESS AND HOLD KEY C TO ENTER THE ADJUST MODE.
- AFTER GOING INTO ADJUST MODE, PRESS KEY A (+) AND KEY B (-) TO INCREASE AND DECREASE THE DIGITS RESPECTIVELY; PRESS KEY C TO CONFIRM AND CHANGE NEXT DIGIT. THE SETTING SEQUENCE IS : TO ADJUST HOME CITY, DST, SECONDS, HOUR, MINUTE, 12/24 HOURS SYSTEM, YEAR, MONTH, DATE; PRESS C TO CONFIRM.

WORLD CITY

1. TO SEE WORLD TIME LOCATION AND CITY, PRESS KEY A
2. TO CHANGE WORLD CITY TO HOMETIME:
 - PRESS KEY A TO SEE THE WORLD TIME LOCATION & CITY
 - AS SOON AS YOU SEE THE TIME, PRESS AND HOLD KEY A. THIS HAS NOW SWITCHED WORLD TIME TO HOME TIME. (THE HOME TIME WILL BE WORLD TIME NOW).
3. IF YOU WANT TO CHANGE THE WORLD CITY:
 - FIRST, CHANGE WORLD TIME TO HOME TIME AS IN POINT 2.
 - GO TO TIME ADJUST MODE (SEE TIME) AND ADJUST THE HOME CITY
 - REPEAT 2 TO CHANGE WORLD TIME BACK TO HOME TIME.

- THERE ARE 27 TIME ZONES TO CHOOSE FROM, SELECT BY KEY A (+) OR KEY B (-) IN TIME ADJUST MODE. ZONES LISTED AS FOLLOWS:

ZONE NAME	ABBREVIATION	OFFSET FROM GMT
HONOLULU	HNL	-10
ANCHORAGE	ANC	-9
LOS ANGELES	LAX	-8
DENVER	DEN	-7
CHICAGO	CHI	-6
NEW YORK	NYC	-5
CARACUS	CCS	-4
BUENOS ARIES	BUE	-3
RIO DE JANEIRO	RIO	-3
AZORES IS.	PDL	-1
LONDON	LON	0
PARIS	PAR	+1
ROME	ROM	+1
BERLIN	BER	+1
ATHENS	ATH	+2
JERUSALEM	JRS	+2
MOSCOW	MOW	+3
RIYADH	RUH	+3
DUBAI	DXB	+4
KARACHI	KHI	+5
YANGON	RGN	+6
BANGKOK	BKK	+7
HONG KONG	HKG	+8
BEIJING	BJS	+8
TOKYO	TYO	+9
SYDNEY	SYD	+10
WELLINGTON	WLG	+12